


BLE IEC+RTD

Configuration Info & Instruction

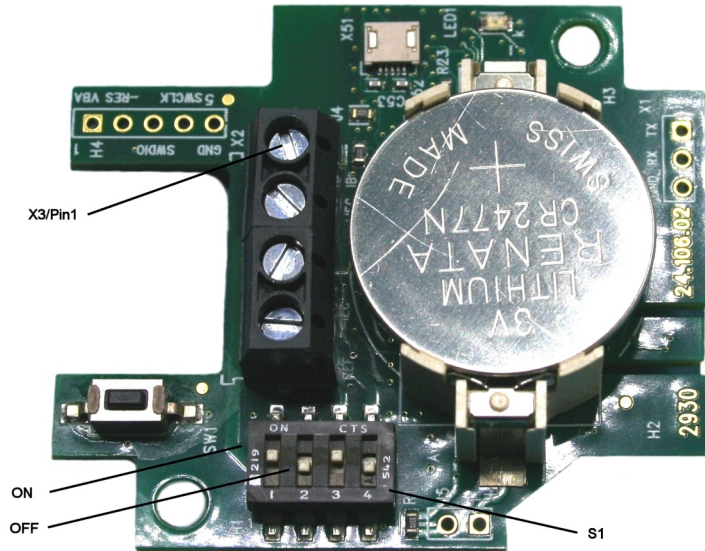

Switch positions and functions

S1-1 OFF: X3/pin1 – X3/pin2 not connected

S1-1 ON : X3/pin1 – X3/pin2 connected

S1-2: IEC-config1 (not implemented yet); must be OFF

S1-3 OFF: X3/pin3 – X3/pin4 not connected

S1-3 ON : X3/pin3 – X3/pin4 connected

S1-4: IEC-config2 (not implemented yet); must be OFF

RTD 4-wire: All switches must be OFF; use pins 1-2 and 3-4

RTD 2-wire: S1-1 and S1-3 ON; use pins 2-3 or pins 1-4

RTD 3wire : Not supported yet